
 



X7	
HDMI	
HDMI_TX2P	TX2+
GND	TX2/4_Shld
HDMI_TX2N	TX2-
HDMI_TX1P	TX1+
GND	TX1/3_Shld
HDMI_TX1N	TX1-
HDMI_TX0P	TX0+
GND	TX0/5_Shld
HDMI_TX0N	TX0-
HDMI_TXCP	TXC+
GND	TXC_Shld
HDMI_TXCN	TXC-
CEC	CEC
Reserved	Reserved
DDC_SCL	DDC_CLK
DDC_SDA	DDC_Data
GND	DDC_GND
5V	5V
HP_Detect	HP_Detect
BODY	Shield_1
BODY	Shield_2
BODY	Shield_3
BODY	Shield_4

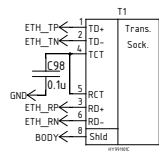



X6	
GND	Name
UART0_RX	
UART0_TX	
VCC_3V3	



X1	
Micro USB	
5V	1
USB0_DM	2
USB0_DP	3
GND	4
BODY	5
	6

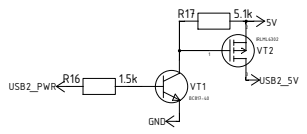

X5	
USB "A"	
USB2_SV	1
USB2_DM	2
USB2_DP	3
GND	4
BODY	5

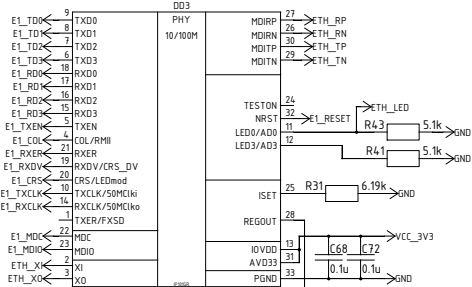 


X3	
5V	1
5V	2
LVDS0_VN0	3
GND	4
LVDS0_VN1	5
GND	6
LVDS0_VN2	7
GND	8
LVDS0_VN3	9
GND	10
ADC1	11
ADC2	12
ADC3	13
ADC4	14
GND	15
GND	16
GND	17
GND	18
GND	19
GND	20
GND	21
GND	22
GND	23
GND	24
GND	25
GND	26
GND	27
GND	28
GND	29
GND	30

X4	
VCC_3V3	1
GND	2
GND	3
GND	4
GND	5
GND	6
GND	7
GND	8
GND	9
GND	10
GND	11
GND	12
GND	13
GND	14
GND	15
GND	16
GND	17
GND	18
GND	19
GND	20
GND	21
GND	22
GND	23
GND	24
GND	25
GND	26
GND	27
GND	28
GND	29
GND	30

X8	
5V	1
SPI1_CLK	2
SPI1_MOSI	3
GND	4
SD_D0	5
SD_D1	6
SD_D2	7
SD_D3	8
SD_CMD	9
SD_CLK	10
TVIND	11
HPOUTL	12
LINEB	13
UART3_TX	14
UART3_RX	15
UART5_TX	16
UART5_RX	17
PG0	18
PG1	19
PG2	20
PG3	21
PG4	22
PG5	23
PG6	24
PG7	25
PG8	26
PG9	27
PG10	28
PG11	29
PG12	30

X9	
5V	1
RESET	2
PH1	3
PH2	4
PH3	5
PH4	6
PH5	7
PH6	8
PH7	9
PH8	10
PH9	11
PH10	12
PH11	13
PH12	14
PH13	15
PH14	16
PH15	17
PH16	18
PH17	19
PH18	20
PH19	21
PH20	22
PH21	23
PH22	24
PH23	25
PH24	26
PH25	27
PH26	28
PH27	29
PH28	30

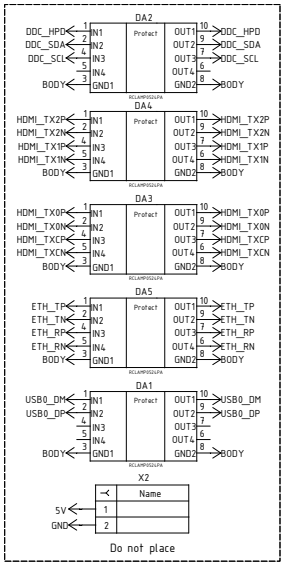

X2	
5V	1
GND	2

SK-A40i  
www.starterkit.ru  
www.out4.ru

